




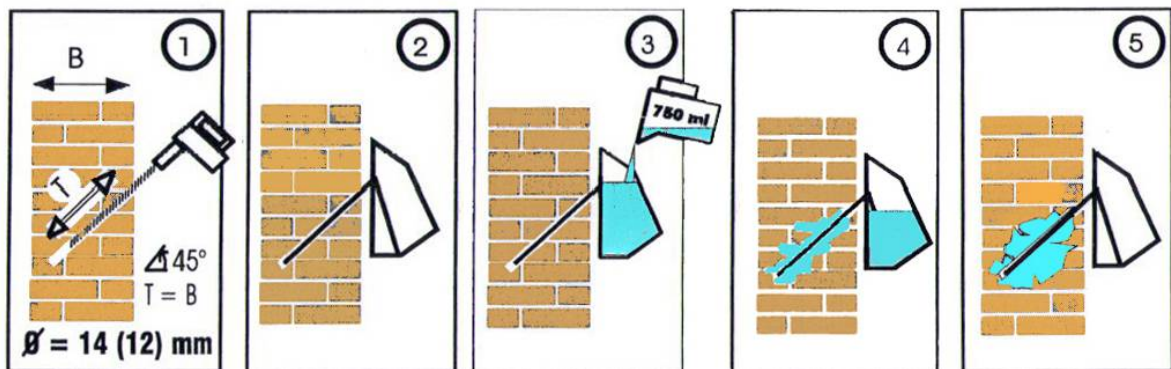


## Tröppel container 019 Work instruction

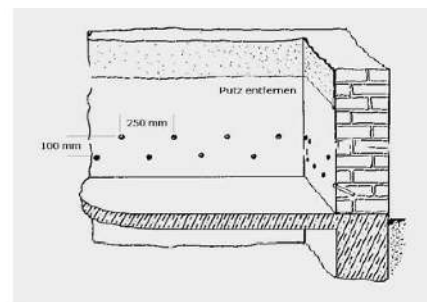

Distance between the drillholes

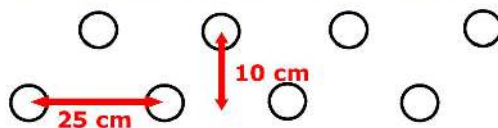

How to drill the wall:

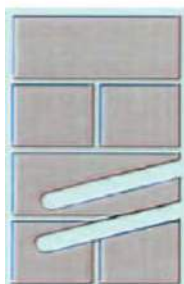

- 1) At least 2/3 of the wall thickness (40 cm wall = 26 cm of drilling)
- 2) Drill downwards in a angle of 45°
- 3) Drill in floor area

## Proceeding

1. Remove plaster
2. Mark drillholes
3. Drill
4. Remove dust out of drillholes (vacuum cleaner)
5. Insert Tröppel 019
6. Tröppel 019 must remain in the wall for at least 24 hours
7. You can use this system up to 50 % humidity inside the wall

These technical information describe the present-day state of knowledge these product. They should only inform about the possibilities of application and could not release the applicator of his commitment to check the possibility to use the product for the required application. Information for processing can be found in processing instructions of our product. Information about safe handling can be found in our current safety data sheet.

ATI- Tröppel container 019  
© ARCAN GmbH  
All rights reserved

## ARCAN Waterproof

ARCAN GmbH Spezialbaustoffe

Kleinniedesheimer Strasse 19  
D-67240 Bobenheim-Roxheim  
Phone: +49 (0)6239 - 99 78 20  
Mail: [office@arcan.biz](mailto:office@arcan.biz)  
Web: [www.arcan.biz](http://www.arcan.biz)

passion to invent 